


Jack Clamp Installation Instructions

Note: rear plate and wires removed for clarity



1. Locate the jack on your pickup and remove the cap nut, retaining nut, and all washers.

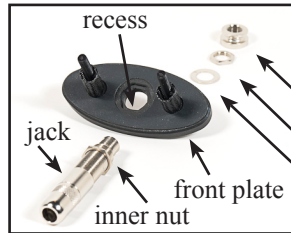

2. The inner nut (still on the jack) should fit into the hexagonal recess in the back of the front plate. Adjust the inner nut to be 1/2" from the open end of the jack. This will set you up for step 4 and ensure that your instrument cable will be able to connect properly with the jack.



3. Reinstall only the front washer and retaining nut. Tighten the nut snugly with a 1/2" wrench. Discard any extra washers.



4. Reinstall and tighten the cap nut. The open end of the jack should be flush with the face of the cap nut in order to ensure a good fit with the instrument cable. If it is not flush, re-adjust the inner nut.



5. To attach the clamp, turn the thumbscrews counter-clockwise to open or clockwise to tighten. The clamp does not require tools; finger-tight is enough.

The lower soundhole is a suggested installation location, but your harp may have internal braces or other features that would accept the jack clamp just as well. The rubber padding on the inside faces of the clamp will grip any surface and hold the clamp firmly in place. When finding the right place for your clamp, try to keep the pickup wire(s) from loosely contacting the harp, to reduce the chance of unwanted buzzing. For the cleanest look, try to find an instrument cable with a right angle plug as pictured on the cover.

Call us with any questions!

Dusty Strings